


# 2184-252 Tyre Sealant Pump Assembly Instructions

## Carton Contents

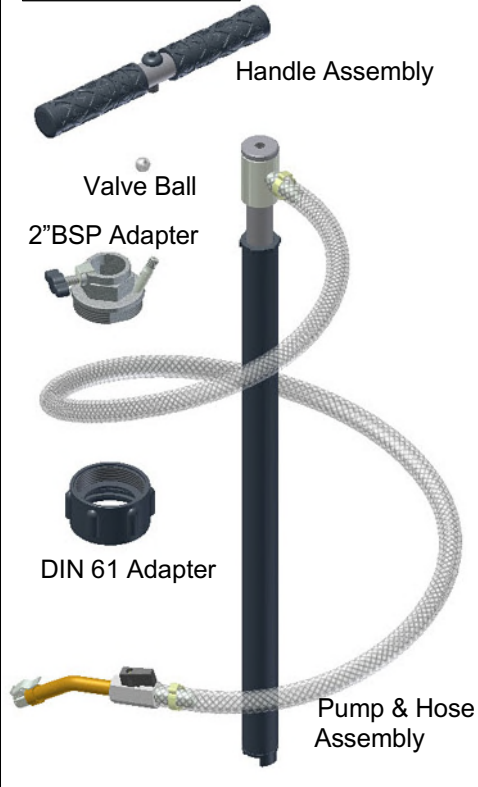

**1 Screw adapters into drum**



**2 Lower pump into drum**

**3 Tighten locking screw**



**4 Drop ball into valve housing on top of pump**

**5 Locate and spin on handle**

**Pump is now ready to operate.**



During operation the pump may become clogged with fibre. Should this occur remove the handle and pull out loose fibres. Lift out ball and clear the valve. Re-assemble ball and handle. Check inlet valve at the bottom of the pump and clear as necessary.